




PowerPod Tips and Troubleshooting October 2017

- 1) PowerPod status light does not turn on when I click its button
 - a. PowerPod battery needs charging. Connect PowerPod to USB charger. Click button; status light will flash red continuously. When the battery is fully charged the status light will turn off
 - b. After charging, if PowerPod light remains unresponsive to button clicks, press-hold its button CONTINUOUSLY for about 10 seconds, *until you see the status light flash*. This “Hard Reset” reboots the PowerPod.
- 2) Status light is still RED after sensor pairing (PowerPod pairing instructions, Step 4)
 - a. It’s possible that your PowerPod has a “weak” green LED, which prevents a yellow, blended color. After pairing, look carefully at the status light to see if you see a fainter, green LED color as well as a bright red color. If you see green, your PowerPod has paired properly.
 - b. Make sure you have an ANT+ speed or speed/cadence sensor (“SPEED SENSOR”) installed on your bike. Look for an ANT+ logo on your sensor:

 - c. We recommend attaching magnet-less ANT+ speed sensors to the front wheel.
 - d. Magnet-based ANT+ speed sensors: make sure the spoke magnet passes within 1-2 coin widths of the SPEED SENSOR.
 - e. Confirm proper operation of SPEED SENSOR by spinning bike wheel; bike computer display should show speed. If speed is shown, pair PowerPod to speed sensor following step 4 of PowerPod instructions.
 - f. If bike speed is not shown in display, pair speed sensor to bike computer. Spin bike wheel and confirm speed is shown. If no speed, remove speed sensor battery, insert battery “backwards” momentarily, then reinsert normally (sensor reset). Pair sensor to bike computer, then spin bike wheel; bike computer display should show speed. If confirmed, pair PowerPod to sensor (step 4).
 - g. If you still don’t see bike speed, replace speed sensor battery. Pair speed sensor to bike computer, then spin bike wheel; bike computer display should show speed. If confirmed, perform PowerPod Step 4 instructions again.
 - h. If you still don’t see bike speed, speed sensor is defective.
- 3) I see zero watts on my bike computer screen even after riding for 8 minutes
 - a. PowerPod is turned off. Click button. **Light must become solid Green.**
 - b. If PowerPod light flashes green, *then light turns off*, spin the bike wheel, then click the PowerPod button. **Status light must become solid Green**, indicating


- successful pairing with SPEED SENSOR. If solid green does not appear, pair speed sensor to PowerPod (press-hold PowerPod button for 4 seconds, until flashing).
- c. Cadence sensor is not functioning properly. Make sure that your cadence magnet passes within 1-2 coin widths of the cadence sensor. Make sure that cadence sensor is attached firmly to chain stay so that it cannot move. To check proper operation of cadence sensor, spin bike crank backwards for 5 seconds, and confirm that non-zero cadence (RPM) is shown on bike computer display.
 - d. Pair PowerPod to bike computer (instructions Step 5), making sure to follow your bike computer's pairing instructions.
- 4) I see zero watts, or low watts, or high watts *only for the first 8 minutes of my ride*, then power becomes normal
 - a. PowerPod sensor is not tightly fastened to its mount. After attaching PowerPod to mount, but before tightening the mount bolt fully, gently rotate PowerPod "skyward" from the rear, until its rotation is stopped by the mount. Then, tighten the mount bolt firmly, **so that the PowerPod cannot rotate**.
 - b. After reattaching the PowerPod, it is rotated to an angled position different from its prior attachment. Before tightening the mount bolt fully, gently rotate PowerPod "skyward" from the rear, until its rotation is stopped by the mount. Then, tighten the mount bolt firmly, **so that the PowerPod cannot rotate**.
 - 5) I see zero watts on my bike computer screen after stopping for a rest break
 - a. PowerPod has gone to sleep. Click button. Upon pairing light is solid green.
 - 6) After going over a bump, my watts change abruptly to higher or lower values for the next 8 minutes, then become normal.
 - a. PowerPod is not firmly attached to its mount, allowing it to rotate after hitting a bump. Gently rotate PowerPod from the rear, until its rotation is stopped by the mount. Then, tighten the mount bolt *firmly*, **so that PowerPod cannot rotate**.
 - 7) My watts seem consistently too high or too low.
 - a. Make sure PowerPod wind port is not blocked or obstructed by bike cables

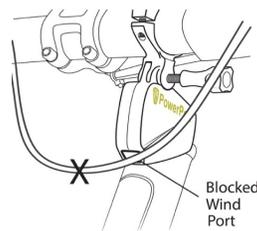


- b. Make sure Indoor Trainer mode is OFF (see below)
- 8) When I put PowerPod on another bike, I show zero power.
 - a. Follow PowerPod instructions, steps 4 to 6, to set up PowerPod on your second bike. *Each time you change bikes you will need to perform steps 4 through 6, or **optional**: see Isaac instructions below to create a separate "profile" for your other bike.*
 - 9) PowerPod does not work with my indoor trainer or rollers.
 - a. Use Isaac instructions below to set up your PowerPod for use with indoor trainer/rollers

USING POWERPOD WITH ISAAC SOFTWARE


- Install free Isaac software for Mac/PC, available here:
<http://www.ibikesports.com/index.php/downloads/>
Mac users: *The first time you run Isaac, make sure to hold the “control” button on your keyboard, then click on the Isaac icon, then select “Open” from the menu that appears. This procedure temporarily bypasses the security features of OSX.*
- Connect PowerPod to your computer using its USB cable. Click PowerPod button to turn it on. When PowerPod is connected to Isaac, a green box will appear around the USB icon located at the top of menu bar:



- **ONLY if you are using the PowerPod combo mount**, use Isaac to select PowerPod Profile 2 using the command below. After selecting Profile 2, click “Send to Device” button. Then, perform PowerPod instructions steps 4), 5) and 6) to complete the setup of your PowerPod for the combo mount.

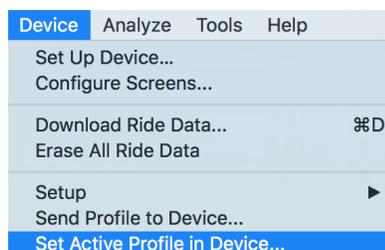

- If you are using the PowerPod handlebar mount, select profile 1, 3 or 4, following the instructions immediately above.
- Use the Isaac command “Device/Set Up Device...,” to fine-tune the settings of your PowerPod, or set up in PowerPod a new profile for another bike.
 - 1) Connect PowerPod to your computer and launch ISAAC software
 - 2) Using ISAAC Software, “Device/Set Up Device...” wizard:
 - 3) If you’re fine-tuning your PowerPod, then select Profile 1 or 2
 - 4) If you’re adding a new bike, select a new profile (Profile 1 or 2 has already been used for your first bike)
 - 5) Type in a name you’d like to have for your profile
 - 5) Click the “Next” button and enter your bike and rider information as instructed by the “Set Up Device” windows.
 - 6) In the final window of the wizard, choose “Keep Accuracy...”
 - 7) IMPORTANT: Follow PowerPod instructions steps 4) through 6) to pair your PowerPod to your bike’s speed or speed/cadence sensor




TIP: If you have more than one bike, *and* have used Isaac to create separate PowerPod profiles for each bike, then PowerPod will automatically set itself to the profile that you’re


using for today's bike ride.

To use PowerPod with your indoor trainer or rollers:


1. Connect PowerPod to your computer, click button to turn it on, then launch Isaac software
2. Select the Isaac command "Device/Edit Trainer Settings..."

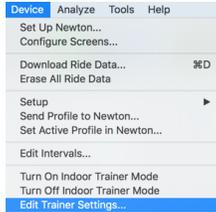

3. Select your indoor trainer OR rollers model from the list underneath the tab. In the example below, "Kinetic Cyclone" indoor trainer has been selected. Then, in the bottom of the window click the "Send to iBike" button below the speed/power graph. PowerPod will "memorize" the selected indoor trainer model in its memory.

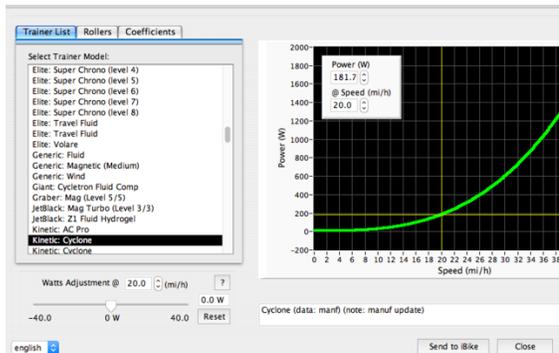


4. To turn on indoor trainer mode, use this command from Isaac, then wait for Isaac's confirmation that trainer mode has been turned on:

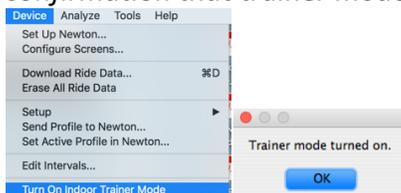

5. IMPORTANT: ONCE ENABLED, INDOOR TRAINER MODE WILL REMAIN "ON" FOR ALL SUBSEQUENT POWEROD RIDES, UNTIL YOU TURN IT OFF.

IMPORTANT: WHEN TRAINER MODE IS "ON", POWERPOD WILL NOT PROVIDE ACCURATE POWER READINGS WHEN USED FOR OUTDOOR RIDES.

6. To turn indoor trainer mode off, select this command from Isaac, then wait for Isaac's confirmation that trainer mode has been turned off:

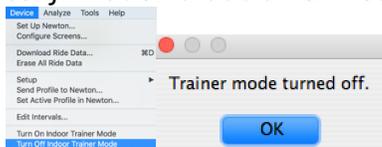

7. IMPORTANT: WHEN INDOOR TRAINER MODE IS "OFF", POWERPOD WILL NOT PROVIDE ACCURATE POWER READINGS WHEN USED FOR INDOOR RIDES.